



Valve Operation (with handbrake interlock)

ENGAGING THE PTO

To engage the valve apply vehicle hand brake, then press PTO switch to the ON position. Valve will be energised and the LED will be lit.

DISENGAGING THE PTO

To disengage the PTO press the PTO switch to the OFF position. The valve will be de-energised and the LED will extinguish.

NOTE

Releasing the vehicle hand brake whilst the PTO is engaged will automatically disengage the PTO. To re-engage the PTO follow the engage procedure above.

Warning

It is the responsibility of the installer to ensure any auxiliary pneumatic connection to a type approved chassis is taken from the chassis manufacturers protected supply!

Ensure vehicle air is clean and dry!

Cut all pipes squarely – Do not use pliers or snips.

Technical specifications are subject to change without notice.

Member of **JOST**-World

JOST, Germany Tel. +49 6102 295-0, jost-sales@jost-world.com, www.jost-world.com
Edbro, UK, Tel. +44 1204 528888, sales-uk@jost-world.com, www.edbro.com

E5467

Rev 2, Dec 2017