


C Series Installation Check List - INSTALL02

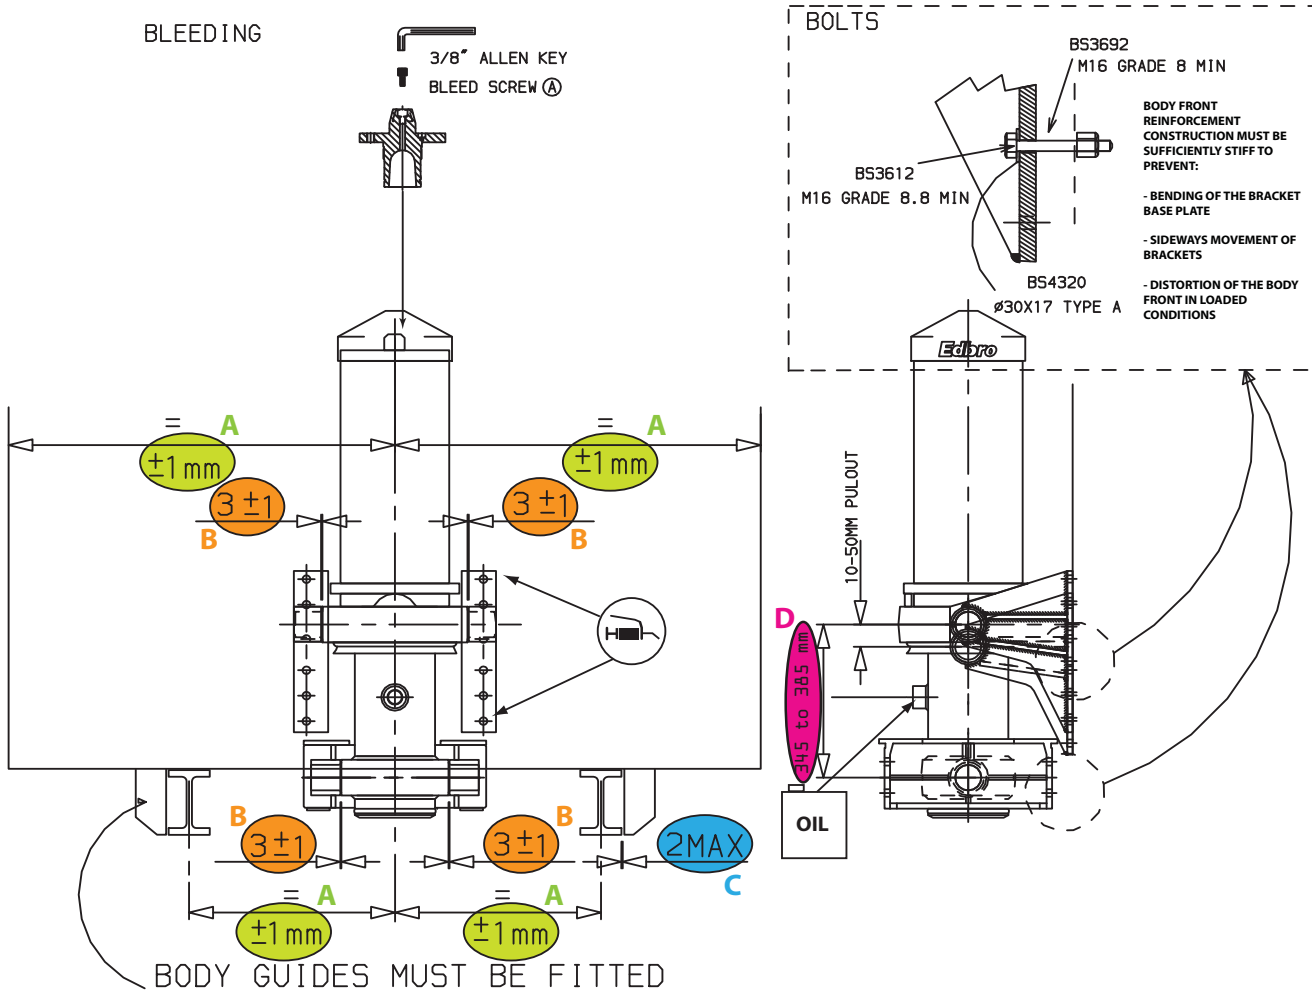

INSTALLATION CHECK LIST

A. Check cylinder alignment

B. Check bracket clearances

C. Check body guide clearances

D. Check cylinder mounting pin centres

E. Check bolt torques

F. Confirm no oil leaks

G. Air bleeding done



Cylinder Bleeding Procedure

- * Lift body approx 300 mm
- * Loosen bleed screw (A)
- ⚠** * **Take care!** Body will lower
- * Allow air to escape
- * Tighten when oil flows
- * Lift body to full tip
- * Lower & repeat

Recommended Torques

	Grade 8.8	Grade 10.9
M10	56Nm	77Nm
M12	98Nm	134Nm
M16	240Nm	332Nm

Retorque all bolts monthly

Oil/Grease



Oil Port



Grease (1/8" BSP)

See oil specification OIL01

All dimensions are given in mm unless otherwise stated. Technical Specifications are subject to change without notice.